

## Installation auto pool cleaner For model ZX50 - 28007

If the auto pool cleaner does not work properly, for example, barely runs, moves in one direction only or does not move at all, it is important to first check whether the product is connected properly.

**Follow the steps below to check this:**

### 1. Check if the auto pool cleaner is connected to the outlet



The auto pool cleaner works on the outlet of the pool. This is where the water from the pool goes into the pump. The auto pool cleaner *does not work* on the force of the water going back in to the pool but on the suction of the pump. For this reason, the auto pool cleaner should be connected to the connection piece where the water flows out of the pool and goes to the pump, the pool outlet. This force creates a suction effect in the auto pool cleaner, causing it to move and start working.

### 2. Connect the auto pool cleaner correctly

**Step 1:** Place the auto pool cleaner on the bottom of the pool

**Step 2:** Fully submerge the hoses. Start at the auto pool cleaner and finish at the end of the hose

**Step 3:** Once the entire hose is below the water surface, you can connect the hose to the connection piece where the water goes from the pool back into the filter pump



For more information, visit the INTEX customer support portal  
[www.intexsupport.com](http://www.intexsupport.com)