

Cordless vacuum cleaners

Avoid improper use of cordless vacuum cleaners; not doing so may lead to malfunction or complete failure.



This product is NOT intended for use in air environment. The cleaner will only work when in water.



The cleaner will only start cleaning when switched on and immersed in water.




Do not put the white microfilter on the outside, otherwise the vacuum cleaner will not work.



Insert the white microfilter into the black microfilter mesh.



When removing the vacuum cleaner from water, do not let the water come out of the front, otherwise the dirt will flow back.

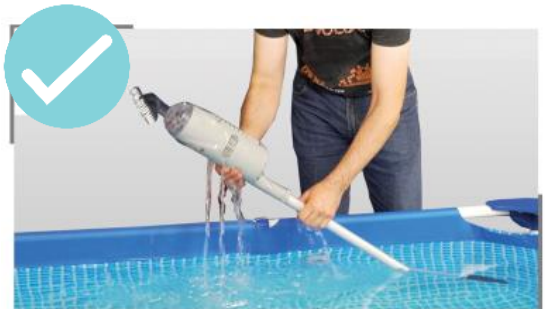

When removing the handle, make sure that the front of the vacuum cleaner is facing upwards. This way, the collected dirt will remain inside



For more information, visit the INTEX customer support portal

www.intexsupport.com