

## Positioning of the hoses for the sand filter pump

### Positioning of the hoses for the 4-way valve

The connecting hose from the motor housing must be connected to the inlet of the 4-way valve. If it is connected to the drain for the backwash, the pump will only operate in the neutral position.

Please connect the hose from the motor housing to the inlet of the 4-way valve. This will cause the pump to operate correctly again.

### Positioning of the hoses for the 6-way valve

The connecting hose from the motor housing must be connected to the inlet of the 6-way valve. If it is connected to the drain for the backwash, the pump will only operate in the neutral position.

Please connect the hose from the motor housing to the inlet of the 6-way valve. This will cause the pump to operate correctly again.



For more information, visit the INTEX customer support portal

[www.intexsupport.com](http://www.intexsupport.com)