

RCD Test – PureSpa

CORRECT PROCEDURE FOR TESTING THE RCD (RESIDUAL CURRENT DEVICE)



Before starting the test, we recommend permanently removing the protective cover film from the control panel.

The **INTEX Pure Spa** hot tub is equipped with a RCD at the end of the power cable. The RCD must be tested before each use. Do not use the hot tub if the RCD is not functioning properly – disconnect the power cable until the fault is professionally repaired.

BEFORE USING THE RCD (RESIDUAL CURRENT DEVICE)

- ✓ The plug must always be dry. Connecting the device to a wet outlet is strictly prohibited!
- ✓ The hot tub plug must be directly connected only to a grounded socket of a fixed electrical installation.

RCD Test – PureSpa

- ✓ To reduce the risk of electric shock and fire, do not use extension cords, timers, adapters, or converters. Ensure the outlet is properly located.



Note: The use of extension cords is a common source of malfunctions and damage, such as burned plugs or voltage drops. Additionally, consider the safety risks associated with using an extension cord. The use of extension cords is prohibited – see the manufacturer's user manual.

WHAT TO DO	WHERE DO I PRESS THE BUTTON?	WHAT DO I SEE	WHAT DO I HEAR
Plug the hot tub into a suitable socket.			
Press the RESET (RÜCKSETZEN) button.	On the RCD	The indicator is red	Short beep
Turn on the hot tub with a short press of the on/off button.	On the control panel	The indicator is red	Long beep
Press the TEST button. If the device is functioning correctly, the RCD and the entire device will shut off (except for the control panel, which will display error E81 because it is running on its own battery, but the base is without power, so it is disconnected from the panel. The panel should be turned off with a long press).	On the RCD	The indicator is colorless	No beep
Press the RESET (RÜCKSETZEN) button, the RCD will turn on, and the power supply to the base will be restored.	On the RCD	The indicator is red	Short beep
Turn on the hot tub with a short press of the on/off button.	On the control panel	The indicator is red	Long beep
If the RCD does not turn on (the indicator remains colorless), the RCD is faulty.			



For more information, visit the INTEX customer support portal
www.intexsupport.com