

How often should the filter be cleaned

- ✓ The filter/cartridge should be rinsed daily or after each use. Replace the filter regularly with a new one (once every few days/weeks depending on the intensity of use of the whirlpool).
- ✓ The water must be clear. Keep the chlorine level in the whirlpool water between 2 and 4 ppm at all times.
- ✓ If the whirlpool water is green/milky or foamy, it is probably the reason for displaying the E90 code. See the user manual for additional information on water treatment.
- ✓ Chlorine acts as a disinfectant and prevents the growth of algae and bacteria. The filter/cartridge only helps to catch mechanical particles in the water.



For more information, visit the INTEX customer support portal
www.intexsupport.com