

Control panel – general information

The control panel is used to control the entire whirlpool. On the PureSpa Bubble whirlpool, the panel is attached to the base with a cable and a pin. On Greywood, Greystone, and Jet&Bubble whirlpools manufactured from 2020, the panels are wireless and located on the electric base. These control panels can be clicked onto the whirlpool edge and feature a touch screen.



Control panel of PureSpa Bubble whirlpool



Control panel of PureSpa Greywood, Greystone, and Jet&Bubble Deluxe whirlpool

Starting up the whirlpool

- ✓ The whirlpool starts up when the cable is plugged into the socket and the RESET button on the RCD is pressed.
- ✓ You will hear a beep and all the lights on the control panel will briefly light up.
- ✓ The (last) measured temperature value will appear on the control panel.
- ✓ However, the control panel is still off.

Switching the control panel on and off

- ✓ The control panel of PureSpa Bubble whirlpool can be switched on with a single press of the ON/OFF button. The green indicator next to the ON/OFF button will then light up.

Control panel – general information

- ✓ With Greystone, Greywood, and Jet&Bubble whirlpools, the control panel can be switched on with a short touch of the ON/OFF button.
- ✓ Make sure not to hold the button for too long, otherwise it will not respond.
- ✓ When the control panel is switched on, the ON/OFF button lights up red.

Controlling the functions

- ✓ When the ON/OFF button is lit red, the control panel is switched on and available for use.
- ✓ The individual functions can be switched on at the touch or press of a button.
- ✓ Wireless control panels: If you press the button for several seconds in a row, it will not respond.

Locking/unlocking

- ✓ The wireless control panel will automatically lock up if it is not actively used for several minutes.
- ✓ The 'lock' indicator lights up green.
- ✓ To unlock, press and hold the lock for 3-5 seconds until the light turns off.



Standby mode

- ✓ The wireless control panel can also be clicked onto the top of the whirlpool tub into a special attachment.

Control panel – general information

- ✓ If the panel is placed on the tub edge in this way and is not used for several minutes, it will go into standby mode – light will turn off.
- ✓ The control panel stops displaying data to save battery, but all selected functions continue to run.
- ✓ To wake up the panel, simply touch any button on the display. The control panel will then light up and you can use it again.

Charging

- ✓ The control panel is charged automatically when inserted into the charging dock on the electronic base and when the RCD is activated.
- ✓ It is recommended to charge the control panel this way after each use.
- ✓ The charging indicator is located on the top of the control panel. The following situations may occur:

1. On the base (in the charging dock)

Green: fully charged

Red: charging

2. Not on the base

Green: charged between 20% and 100%

Red: charged between 5% and 20%

Flashing red: charged to less than 5% (panel with low battery starts beeping)



For more information please visit the INTEX customer support site
www.intexsupport.com