

Gdje postaviti filtraciju i solinatore na otvorenom

Oprema uvijek treba biti postavljena na drvenu bazu.

Nemojte postavljati filter pumpe i sustave slane vode na travu ili slične površine.



Više informacija dostupno je na portalu za korisničku podršku INTEX
www.intexsupport.com